


Shaft Measuring Kit Mitutoyo Basic

K551600 Space4Win Demokit

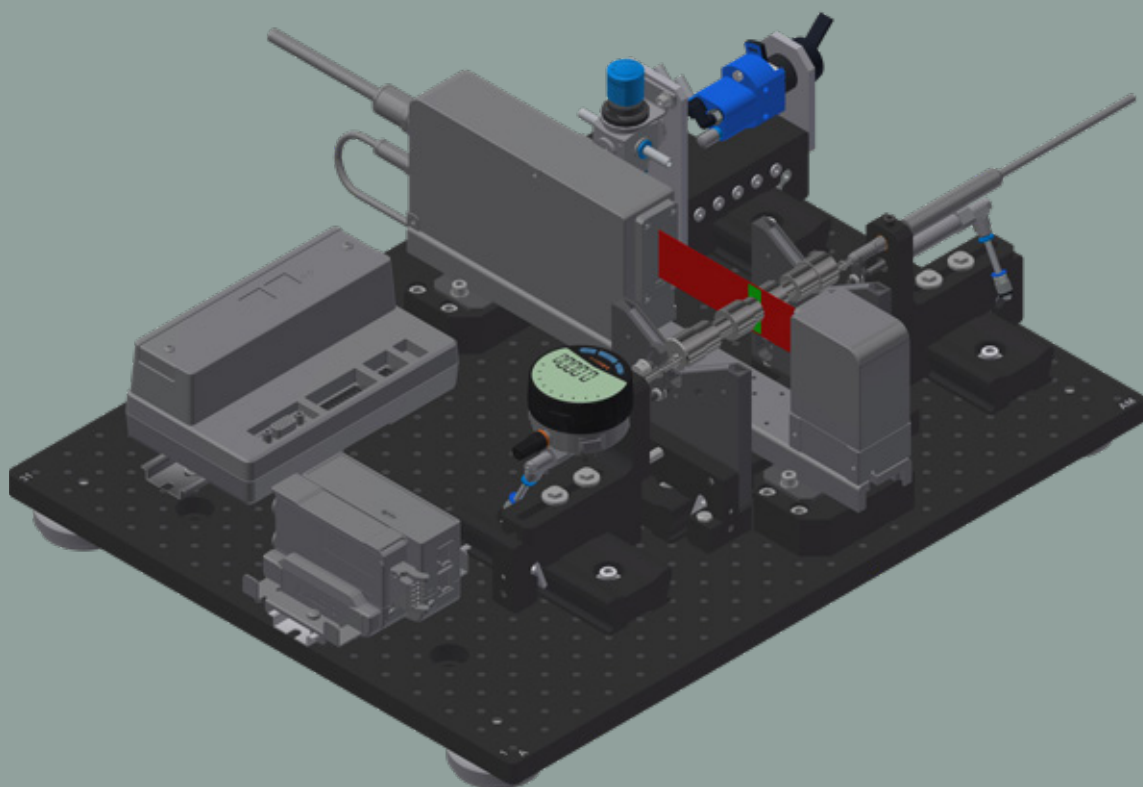


Space4Win is a universal measurement and control software for recording, evaluating and documenting measurement data. The software delivers reliable measurement results for the most demanding measurements, is extremely flexible, controls all common measuring equipment and measuring mechanisms and has all common software and hardware interfaces.

In this demokit, the component characteristics length & diameter can be measured using an individual combination of indicator, probe and Laser Scan Micrometer (LSM) and evaluated with Space4Win. Thus, the extensive functions and possibilities of Space4Win can be tested.

A manual with detailed instructions and information on the correct use of Space4win is included.

Components of the Shaft Measuring Kit


K551591
Mounting unit LSM-30-A*

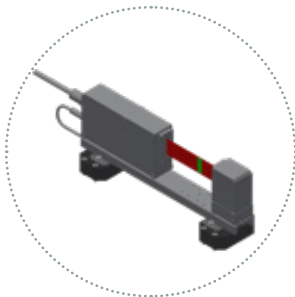

K580770
Demo workpiece for SMK




K551600
Shaft Measuring Kit Mitutoyo Basic*

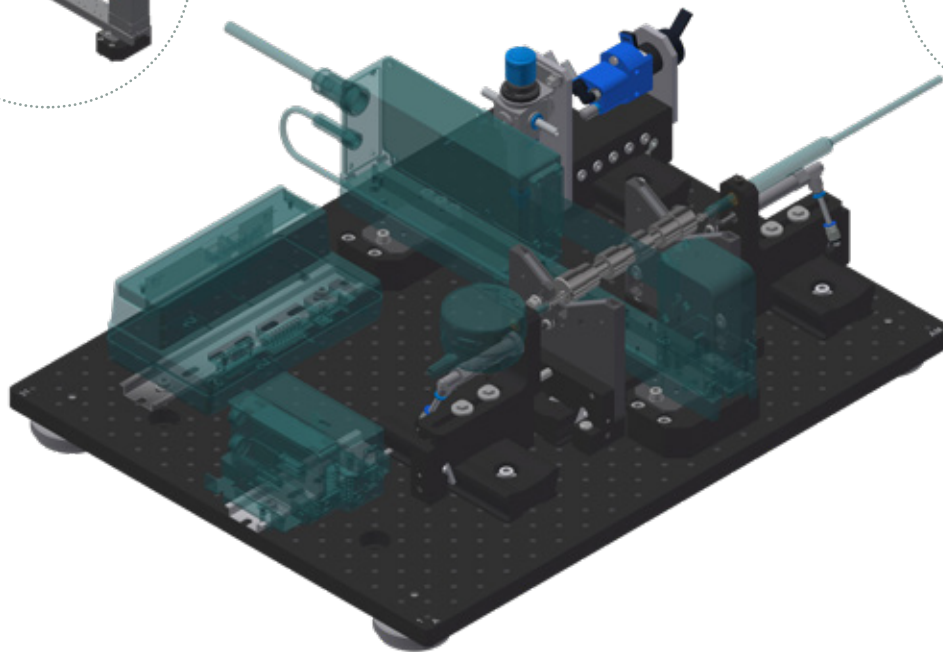

K551377
Measuring slide digimatic indicator*



K551377
Measuring slide Mitutoyo LG100*

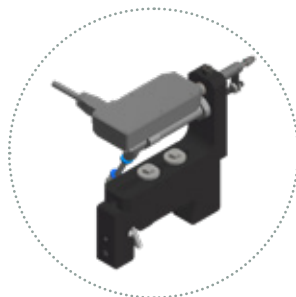

K551377
Measuring slide Mitutoyo LG200*



*Measuring devices NOT included

The kit can be assembled according to your own needs, for example, to measure the length with 2 digimatic indicators, 2 probes or 1 digimatic indicator and 1 probe. Optionally, an LSM can be installed to measure the diameter.

Full kit

Code No.	Description
K551600	Shaft Measuring Kit Mitutoyo Basic Space4Win demo version and manual included

Single items


Code No.	Description	qty.
K551382	Basic construction Shaft Measuring Kit (base plate incl. screws)	1pc.
K551362	Top profile rail L=125mm	3pcs.
K551364	Top profile rail L=175mm	1pc.
K551377	Measuring slide for Digimatic indicator/ LG100/ LG200	2pcs.
K551593	Slide element prism	2pcs.
K551594	Prsim $\varnothing 1$ to $\varnothing 20$ mm	2pcs.
K551592	Stop bracket incl. screw	2pcs.
K551591	Mounting unit Mitutoyo LSM-30-A	1pc.
K551409	Top-hat rail 200 mm incl. screws	1pc.
K551411	Top-hat rail 125 mm incl. screws	1pc.
K551378	Pneumatic control Shaft Measuring Kit	1pc.
K580770	Demo workpiece for SMK	1pc.



Whatever your challenges are, Mitutoyo supports you from start to finish.

Mitutoyo is not only a manufacturer of top quality measuring products but one that also offers qualified support for the lifetime of the equipment, backed up by comprehensive services that ensure your staff can make the very best use of the investment.

Apart from the basics of calibration and repair, Mitutoyo offers product and metrology training, as well as IT support for the sophisticated software used in modern measuring technology. We can also design, build, test and deliver measuring solutions and even, if deemed cost-effective, take your critical measurement challenges in-house on a sub-contract basis.

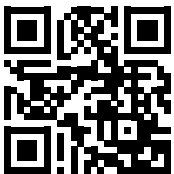

Find additional product literature and our complete catalog here.

www.mitutoyo.eu

Note: All information regarding our products, and in particular the illustrations, drawings, dimensional and performance data contained in this printed matter as well as other technical data are to be regarded as approximate average values. We therefore reserve the right to make changes to the corresponding designs, dimensions and weights. The stated standards, similar technical regulations, descriptions and illustrations of the products were valid at the time of printing. In addition, the latest applicable version of our General Trading Conditions will apply. Only quotations submitted by ourselves may be regarded as definitive.

Mitutoyo

Mitutoyo Europe GmbH

Borsigstraße 8-10

41469 Neuss

Tel. +49 (0) 2137-102-0

info@mitutoyo.eu

www.mitutoyo.eu